

# DynaLabs

**Model DYN-PM-100  
100 N PM Shaker  
Product Manual**

## Product Support

If at any time you have questions or problems with the DYN-PM-100 shaker, please contact a Dynalabs engineer at:

Phone: +90 312 266 33 34 (9 a.m. to 5 p.m., UTC +3)

E-mail: [info@dynamalabs.com.tr](mailto:info@dynamalabs.com.tr)

## Warranty

Our products are warranted against defective materials and workmanship for one year. Defects arising from user errors are not covered by the warranty.

## Copyright

All copyrights of this manual belonging to Dynalabs products are reserved. It cannot be reproduced without written consent.

## Disclaimer

Dynalabs Ltd. provides this publication "as is" without warranty of any kind, express or implied, including but not limited to, the implied warranties of merchantability or fitness for a particular purpose. This document is subject to change without notice, and should not be construed as a commitment or representation by Dynalabs Ltd.

This publication may contain inaccuracies or typographical errors. Dynalabs Ltd. will periodically update the material for inclusion in new editions. Changes and improvements to the product described in this manual may be made at any time.

## Table of Contents

1) Introduction .....	4
2) General Information .....	4
2.1) Unpacking and Inspection .....	4
2.2) System Components .....	4
2.3) Theory of Operation .....	4
2.4) Specifications.....	6
2.5) Outline Drawing.....	7
3) Operation and Installation.....	8
3.1) General.....	8
3.1.1) External Signal Mode .....	8
3.1.2 ) Internal Signal Mode .....	9
3.2) Power Requirements.....	10
3.3) Cooling.....	10
3.4) Frequency Response .....	11
4 ) Mounting Interface.....	11
5 ) Maintenance and Troubleshooting.....	12
6) Safety.....	12
6.1) Grounding.....	12
7) Declaration of Conformity .....	13

## 1) Introduction

The DYN-PM-100 is designed to provide dynamic force excitation for vibration and shock testing of small sized mechanical structures.

The DYN-PM-100 is a compact, lightweight and powerful general purpose electrodynamic shaker with an integrated amplifier providing up to 100 N peak sine force.

## 2) General Information

### 2.1) Unpacking and Inspection

Dynalabs products provide adequate protection for undamaged products to be transported. Document the damages that occur indirectly during the transport and contact the customer representative. Check all components of the shaker. If there is a defect, please contact us.

### 2.2) System Components


The DYN-PM-100 has the following components:

- Electrodynamic Shaker
- Power Adapter
- Signal Cable
- M6X10 Stainless Bolt
- R 1/4 Pneumatic Union
- Product Manual

### 2.3) Theory of Operation

DYN-PM-100 is an electro-magnetic actuator. Electro-magnetic actuators are basically voice coils consisting of a permanent magnet and coil. The moving element can be the coil or the magnet depending on the design requirements. The moving element is usually suspended by an elastic membrane.

DYN-PM-100 has a moving coil (driving coil) whose current is controlled for vibration generation. The stationary magnetic field is produced by a permanent magnet.

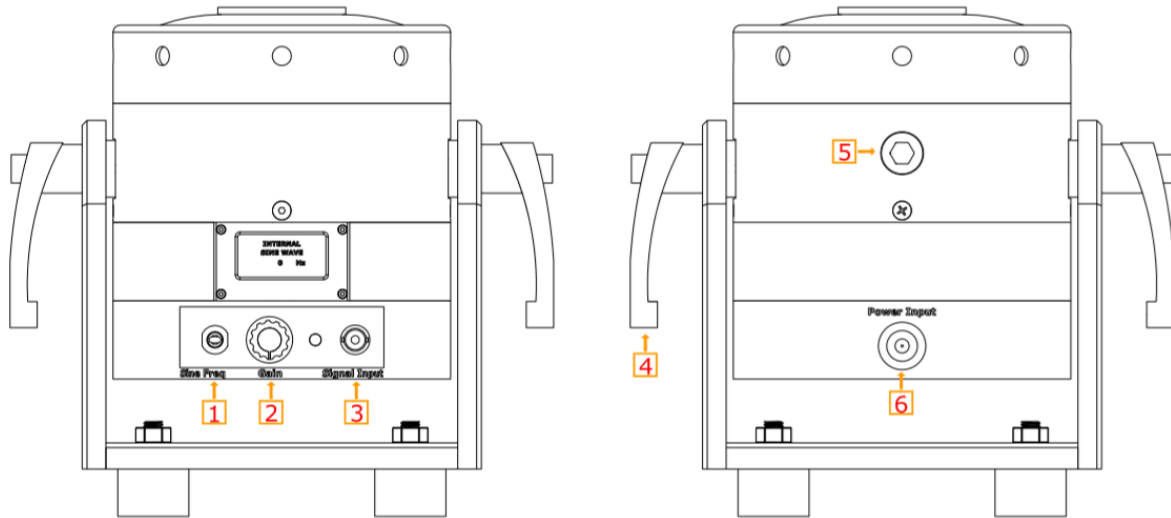


Item	Description
1	Sine Frequency Generator
2	Gain Knob
3	External Signal Input
4	Trunnion Handle
5	Cooling Port
6	DC Power Input

## 2.4) Specifications

<b>Parameters</b>	<b>Specifications</b>
Output Force (Sinus)	100 N
Output Force (Shock)	200 N
Frequency	0-7.5 kHz
Payload	1.5 kg
Displacement (Peak to Peak)	10 mm
Suspension	Carbon Fiber
Maximum Acceleration	60 g
Shaker Weight	7.2 kg
Cooling System	Natural Convection (For continuous operation at 100N forced cooling is suggested)
Operating Temperature Range	5-35 °C
Maximum Input Current	6A (RMS)
<b>AMPLIFIER</b>	<b>INTERNAL</b>
External Signal Voltage Level	1 VAC (PEAK)
Power Supply Voltage	24V DC
Power Supply Current	5A

**2.5) Outline Drawing**


The dimensional properties of DYN-PM-100 shakers are given below.

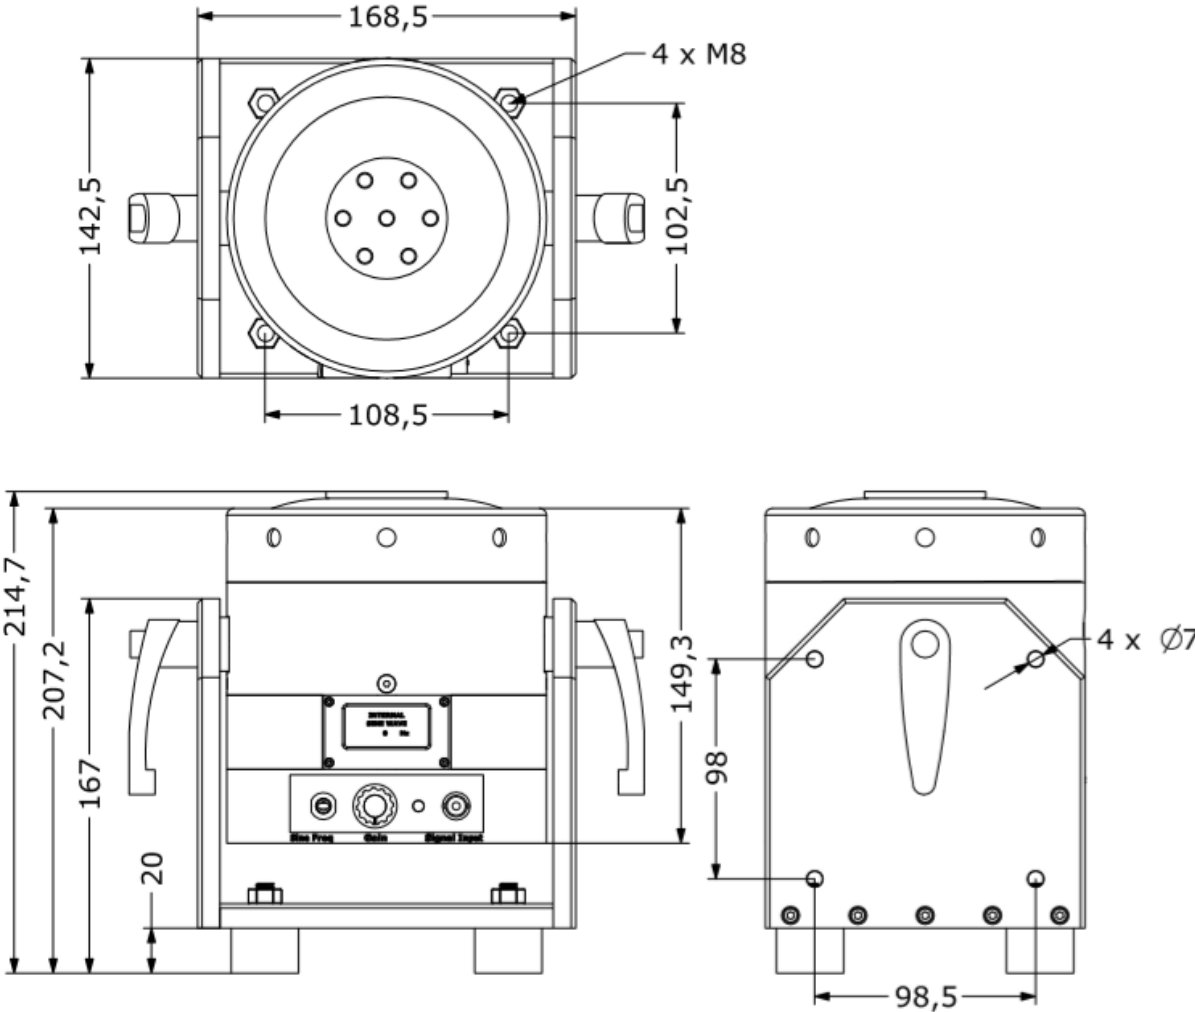

### 3) Operation and Installation


#### 3.1) General

The general shaker connector configuration is given below.

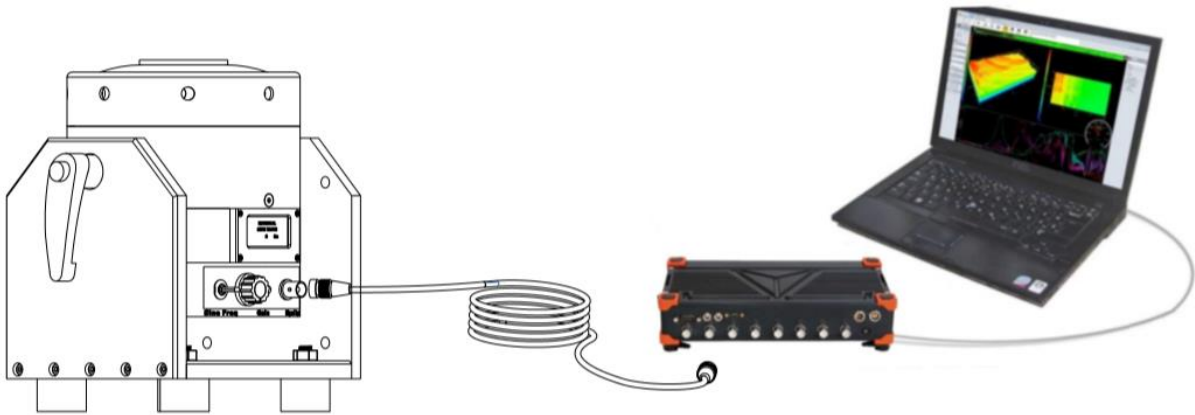


#### 3.1.1) External Signal Mode

Connect DC power source and drive signal to shaker power input and signal input respectively. Start the external signal source. Adjust the Gain of the amplifier by turning the Gain Knob clockwise.

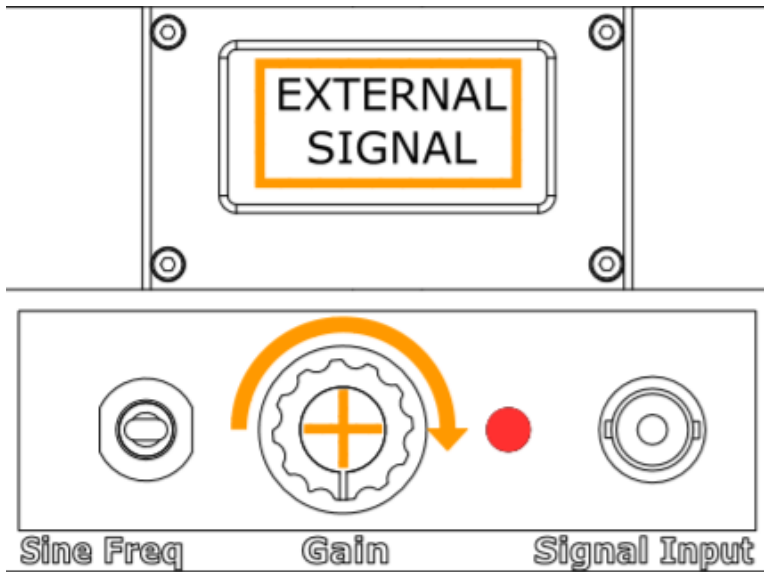


### 3.1.2) Internal Signal Mode

The amplifier can generate sine signal from 1Hz to 15kHz with 1 Hz increments that the user can adjust with the Sine Frequency Generator Switch. Connect DC power source and drive signal to shaker power input. Pull the Gain Knob out.

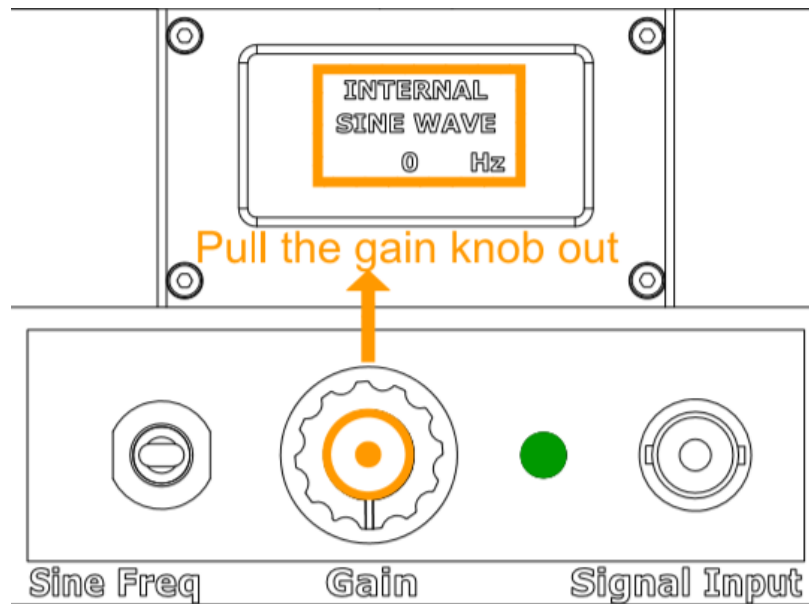

Raise or lower the Sine Frequency Generator Switch to the desired Sine frequency. Adjust the Gain of the amplifier by turning the Gain Knob clockwise. The frequency of the generated sine signal will be visible on the LCD Screen.

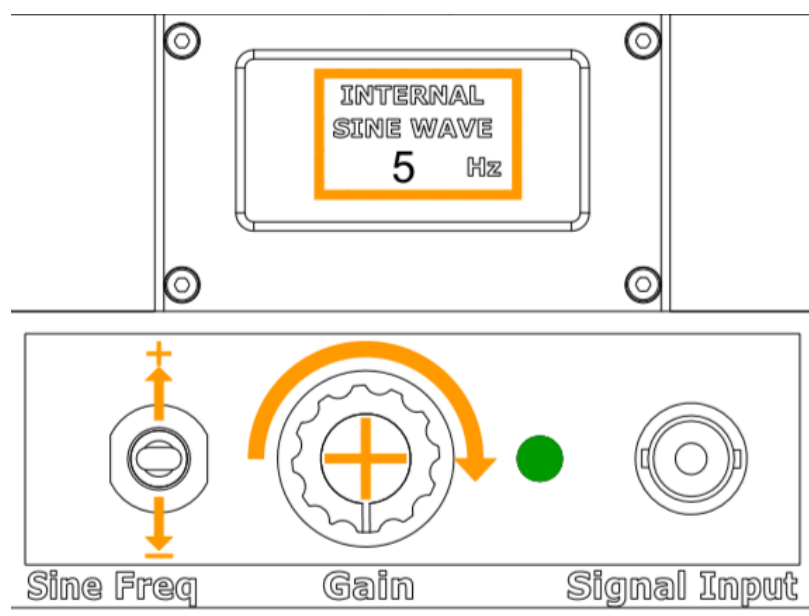


## 3.2) Power Requirements

DYN-PM-100 has an integrated power amplifier which is powered by its power adaptor. Please note the output voltage and current ratings of the adaptor in a replacement adaptor is to be used.


## 3.3) Cooling

DYN-PM-100 does not require forced cooling. Air convection cooling is sufficient for the force levels given in the specifications.

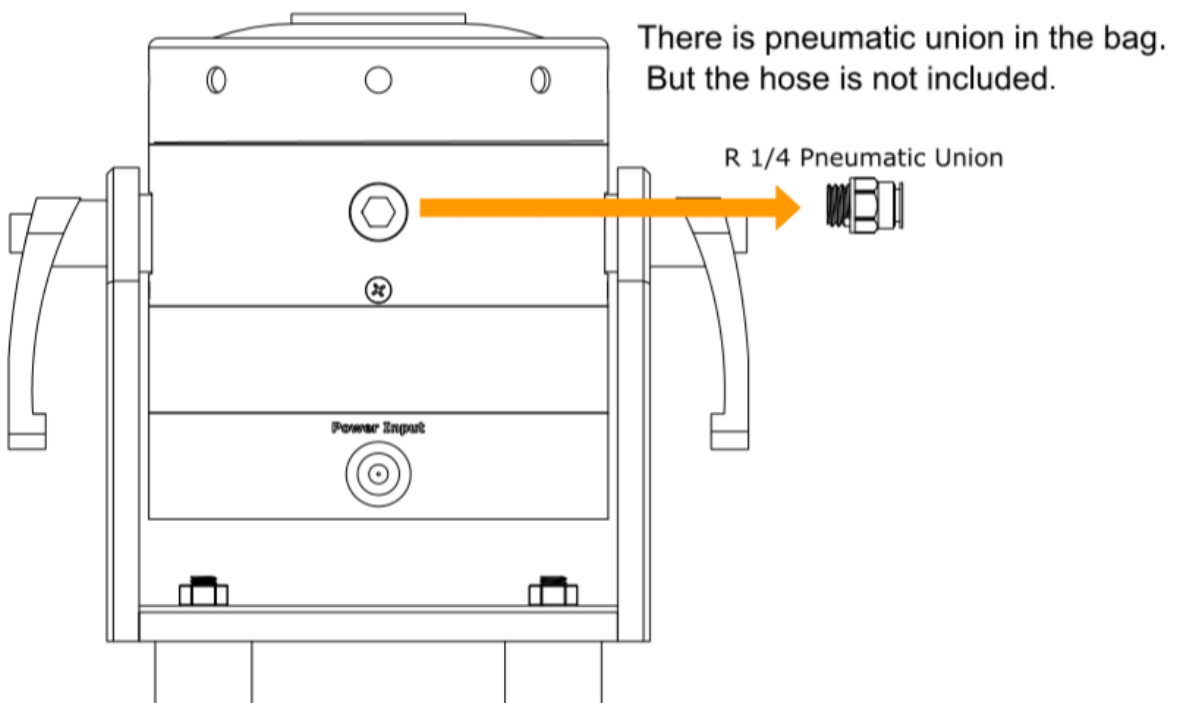


### 3.4) Frequency Response

The following figure shows the acceleration levels/Input voltage versus frequency of the shaker.

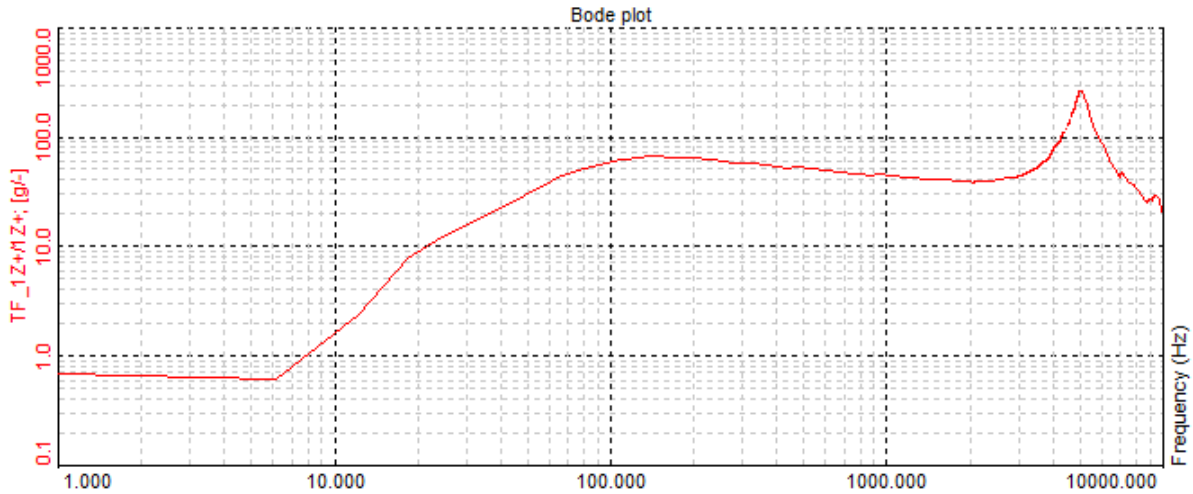

### 4) Mounting Interface

The shaker has seven M6 holes for DUT and fixture connection as shown in the following figure.

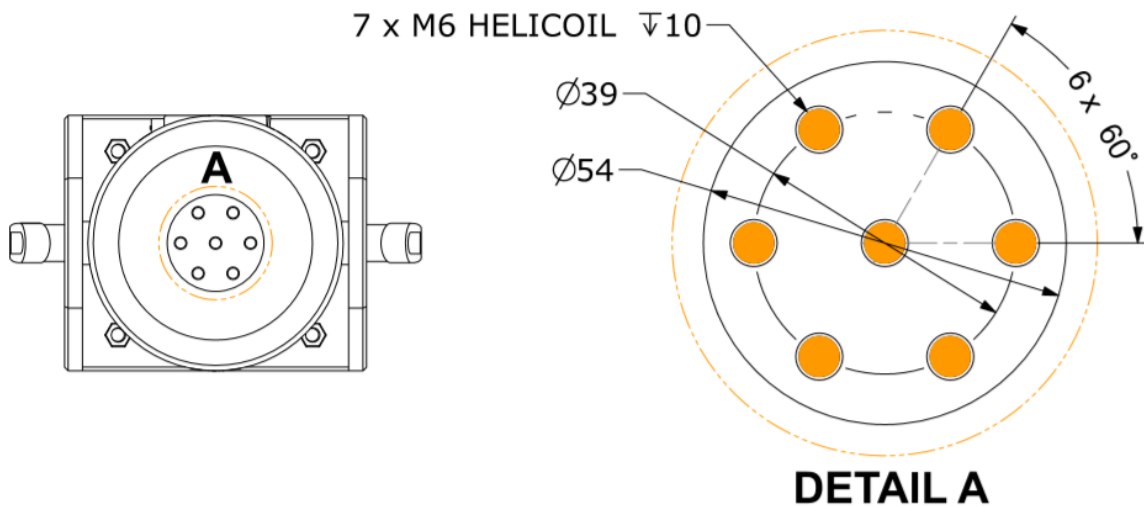

## 5 ) Maintenance and Troubleshooting

The DYN-PM-100 shaker is a sealed device requiring no maintenance if the operating instructions described in this manual are followed. Repair of damage to the coil, exciter body or magnet core should not be attempted. Please return the shaker to Dynalabs for proper repair.


## 6) Safety

Please ensure that this manual section is reviewed and understood prior to installation, operation or maintenance of the equipment. The danger of electrical shock or fire always exists in electrical equipment.

The DYN-PM-100 Shaker is designed for safe operation. Safety features such as electrical insulation on outer surfaces are provided for the safe operation of the shaker system.

### 6.1) Grounding

The shaker is internally grounded via the power adapter. However, if further grounding is necessary a grounding socket is available on the shaker as shown. Appropriate grounding cable is also supplied with the shaker.

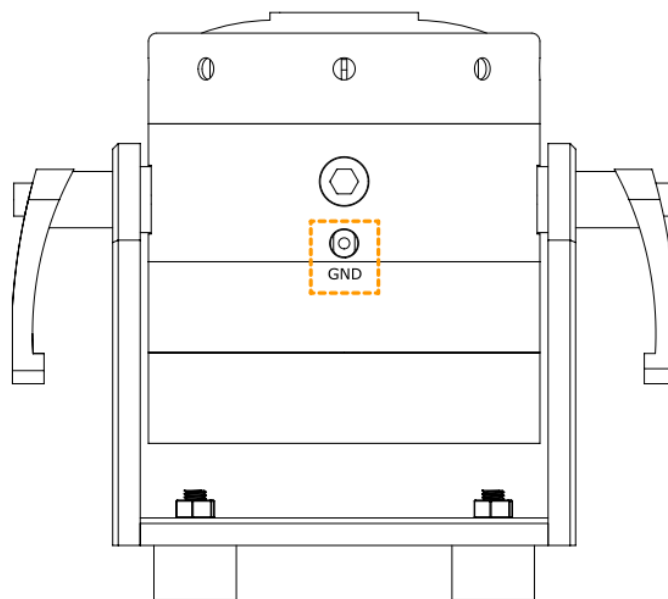

## 7) Declaration of Conformity

**DynaLabs**



*This declaration of conformity is issued under the sole responsibility of the manufacturer.  
The product(s) are developed, produced and tested according to following EC- directives:*

- 2014/35/EU – Low Voltage Directive (LVD)
- 2006/42/EU – Machinery Safety Directive
- 2015/863/EU – RoHS Directive

*Applied standards:*

- EN 61010-1:2010
- EN ISO 12100:2010
- MIL-STD-810-H-2019 (Test Methods: 501.7 - High Temperature, 502.7 - Low Temperature, 514.8 - Vibration, 516.8 – Shock)

*DYNALABSMÜHENDİSLİK SANAYİ TİCARET LİMİTED ŞİRKETİ declares  
that above mentioned products meet all the requirements of the above mentioned  
standards and regulations.*

---

Murat Aykan, Technical Manager

Ankara, 15.07.2021